

INVOLIGHT

LED 8-Panel Effect Light 1*10W 4-in-1 RGBW



AX470


USER MANUAL

LED 8-Panel Effect Light, 1*10W 4-in-1 RGBW Manual

Our LED 8- panel effect light offers many possibilities to achieve the effects which you want. It is designed for the stages, disco, night clubs etc, even the building halls. Please read the manual before operation.

SPECIFICATION:

1. Size: 26.5*25*18.5cm
2. Weight: 3.6 kgs
3. Voltage: 110V-240V
4. Power consumption: 36W
5. LEDs: 1cps*4 (RGBW)
6. Function: DMX, auto running, build in programs, slave mode, sound active mode, digital tube can be inverted, digital
7. Plug on or off, display the No. of the version
8. DMX channel: 4CH
9. LED display for easier operation
10. Fit for disco, bar, KTV, outside show etc.
11. Perfect laser effect, dynamic
12. Necessary fittings, like extend cable, IR remote controller etc

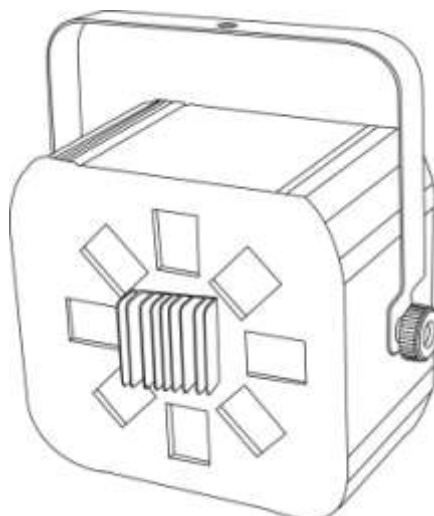

OPERATION

1. Auto Running

- 1) Press the "MODE", enter the auto running mode "AUTO".
- 2) Press the "SETUP", enter the speed menu for the auto running "SPxx".
- 3) Press the "UP" or "DOWN" to set up the speed value SP01~SP100 (FL) .
- 4) Press the "SETUP", enter the strobe menu of the auto running mode "FSxx".
- 5) Press the "UP" or "DOWN" to set up the strobe value FS00~99.

2. DMX mode

- 1) Press the "MODE", enter the DMX mode "dxxx".

- 2) Press the "UP" or "DOWN" to set up the DMX address value d001—d512.
- 3) Press the "SETUP" enter the DMX mode:4ch.

DMX agreement list :

CHANNEL	VALUE	FUNCTION	NOTES
1 (Mode)	000-009	BLACKOUT	
	010-019	R	
	020-029	G	
	030-039	B	
	040-049	W	
	050-059	RG	
	060-069	RB	
	070-079	RW	
	080-089	GB	
	090-099	GW	
	100-109	BW	
	110-119	RGB	
	120-129	RGW	
	130-139	RBW	
	140-149	GBW	
	150-159	RGBW	
	160-229	AUTOMATIC	
	230-255	SOUND-ACTIVATED	
2 (Strobe)	000-009	NO STROBE	010-229
	010-255	STROBE SLOW TO FAST	
3 (Speed)	000-009	NO FUNCTION	WORKS ONLY WHEN CH 1 IS BETWEEN 160-229 (AUTO)
	010-255	SLOW TO FAST	
4 (Motor)	000-009	NO ROTATION	WORKS ONLY WHEN CH 1 IS BETWEEN 010-149
	010-119	ROTATE LEFT FAST TO SLOW	
	120-145	STOP	
	146-255	ROTATE RIGHT SLOW TO FAST	

3. Slave Mode

Press the "MODE", enter the slave mode "SLAV".

4. Sound Active Mode

Press the "MODE", enter the sound active mode "SoUn".

5. LED Display Mode

- 1) Press the "MODE",enter the menu of the manual control the LED display mode“Led”.
- 2) Press the "SETUP",enter to set up the LED display on or off.
- 3) Press the "UP"or"DOWN" to set up the LED display on or off.

Remarks

when it is on, the LED display will light;when it is off,the LED display will turn off after 30 seconds.

6. LED Display Inversion

Press the "MODE",enter the LED display inversion mode“dISP”.

Press the "SETUP",choose the LED display standard display as"dISP"or inversion display as "dSIP".

7. Version

Press the "MODE", enter the program version No.

press the "SETUP", it will show the version No. V10.